



PLEASE READ FIRST...

What is Included

- Sensor
- Interface
- Software
- Calibration
- Drivers Only
- Compression
- Tension
- Universal
- mV/V
- Nominal Value (No Calibration)
- Torque
- Displacement
- Level
- Type
- Model
- Capacity
- Kit
- Analog 0-5V
- Digital USB
- Other

CV-1000

AI-1000 SV-1000

LV-1000 DI-400U

LV-100 DI-1000U

DI-100U Drivers Only

Please Note:

Calibration: This kit is Pre-Calibrated and Ready to Use. Calibration Certificate is included with your Kit. Do Not Recalibrate (Unless Necessary). We recommend that you Recalibrate your sensor once a year. Your Load Cell and Interface must be used as a pair. For Digital USB kits, the Calibration Coefficients are Burned into and Stored in the Interface.

Power Supply: For USB Kits, No Power Supply Needed. System is powered by USB port of your PC. For Analog Kits, Power Supply is included with the kit.

Software: Note: No Software needed for Analog Kits. For Digital Kits, Install the Software and Drivers from the USB Drive Provided. Then, Set Latency Timer to 1ms.

loadstarsensors.com/assets/manuals/latencytimer.pdf

Help

- loadstarsensors.com/specsheets.html
- loadstarsensors.com/sensors.html
- loadstarsensors.com/interface.html
- loadstarsensors.com/software.html

Warranty

- 90 Day Limited Manufacturer's Warranty
- Extended Warranty Available
- loadstarsensors.com/policies.html

Tech Support

- 90 Day Remote Support within 1 Business Day
- Extended Tech Support Available
- support@loadstarsensors.com

Use at Your Own Risk

Loadstar Sensors is not liable for any damages resulting from using these products.