


SensorVUE (SV-1000)

Multi-Channel Software

Display, Log, & Plot Data from Multiple Sensors of All Types

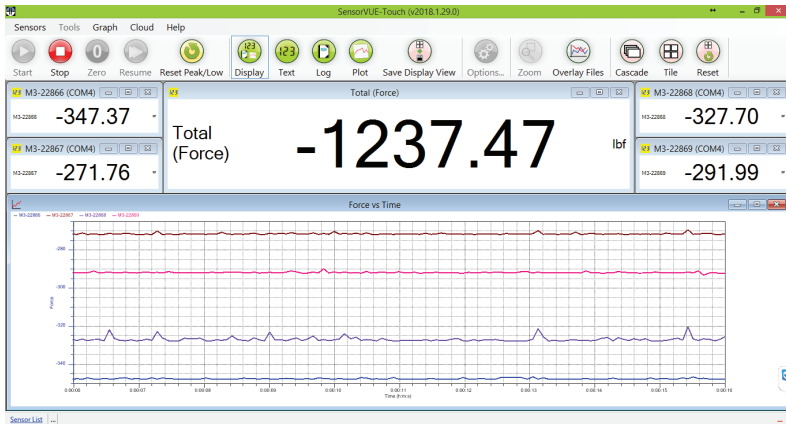

Minimum Requirements

Windows 8/10, 8GB RAM

Features

- Display Data
- Log Data
- Plot Data
- Support Load Cells/Force/Weight
- Support Multiple Sensors
- Support Multiple Sensor Types
- Control External Devices
- Remote Support
- Re-Calibration

How to Install

Follow these Steps to Install the Software on your PC:

1. Insert the USB Drive provided into your PC's USB Port (you need a full USB A style Port) or Download the software from the link provided
2. Locate the Setup file
3. Right Click on the Setup file and Run As Administrator
4. Follow the instructions until setup is complete. Make sure that the Software AND the Drivers are installed. You should see an icon for the software on your Desktop. Connect your load cell and interface to your PC via USB ports. You can then double click on the icon to launch the software.
5. For optimum data update speeds, please set your latency timer for the COM port in use to 1 ms.

Refer to the Instructions in this guide:

www.loadstarsensors.com/assets/manuals/html/how-to-set-latency-timer/latency-timer.html

Help

loadstarsensors.com/assets/specsheets/software.pdf

loadstarsensors.com/sensorvue.html

support@loadstarsensors.com

Watch

Setup & Installation: youtu.be/MRfisxIHMKA

Upgrading: youtu.be/dkQAD1AgmuE

Set Latency Timer: youtube.com/watch?v=HSJX3kK3WJU

Access Detailed Information

Scan the QR Code Or

Visit: loadstarsensors.com/sensorvue.html

